



# DURANGO™ FAMILY CABIN™ 20'X10'

Instructions apply to Part Number 9271-210

## When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.
- See owners manual for more tips

### POLE ASSEMBLY PARTS

Center Curved Roof Poles  
Part No. 9271-205


End Curved Roof Poles  
Part No. 9271-206

Center Brace Poles  
Part No. 9271-202

End Brace Poles  
Part No. 9271-203


Rainfly Poles  
Part No. 9271-204

Rainfly Part No. 9271-201

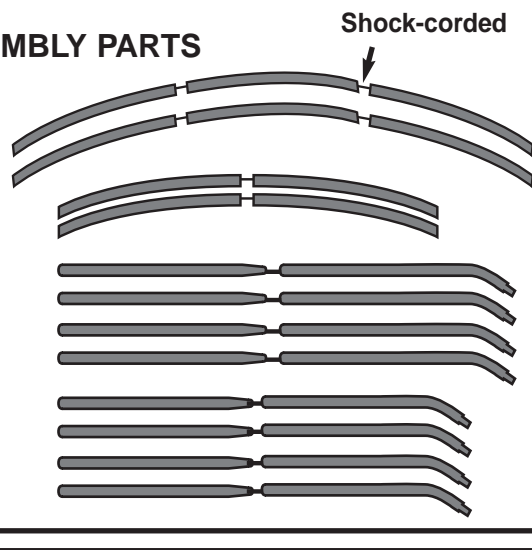


## 1 Layout & Positioning of Tent

- Layout and position tent with door facing desired direction. (illus. 1)
- Stake down tent, starting with the corners. Do not stretch too tight. Angle the stakes slightly toward the tent. (illus. 2) Keep the floor taut.
- Unzip the door.

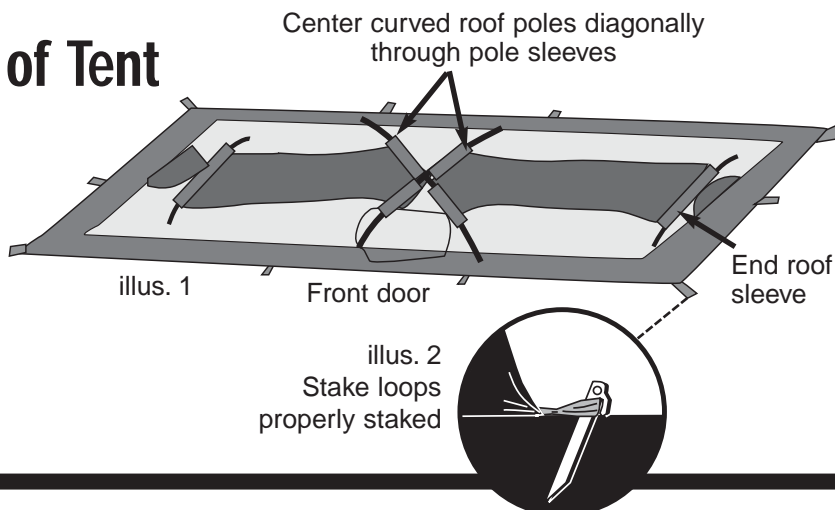

## 2 Assemble & Place Roof Poles


- Assemble all shock-corded roof poles. When assembled will form a continuous arch with both ends pointing down. (illus. 3)
- Select center roof poles (longer, 3 section) and insert them diagonally through the two center roof sleeves. They cross and form an "X". (illus. 1 & 4)
- Select end roof poles (shorter, 2 section). and insert them through the roof sleeves at each end of the tent. (illus. 1)

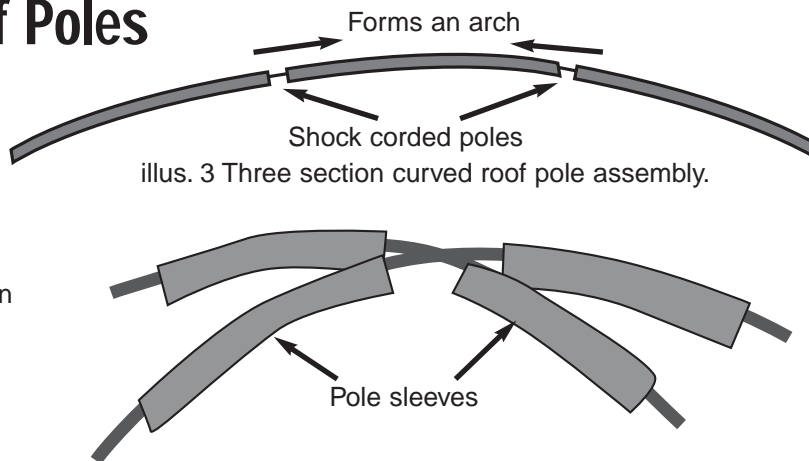


illus. 4 Curved roof pole system shown inserted diagonally through pole sleeves.

# 3 Raise Tent


- Assemble center shock-corded brace poles (longer poles).
- Insert square end of brace poles into curved roof poles and raise tent upright. (illus. 5, 6)
- Brace poles should attach to squeeze pins at bottom of tent. (illus. 7)
- Assemble end (shorter) shock-corded brace poles.
- Insert end brace poles into end roof assemblies. **MAKE SURE** when attaching the brace poles to the curved poles that the bottom of the brace pole naturally points down and toward the center of the tent. (illus. 9)
- Brace poles attach to squeeze pins at edge of tent. (illus. 8)

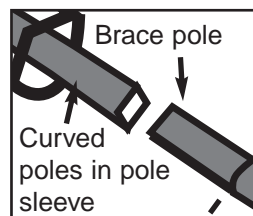

illus. 5 When attaching the brace poles to the curved poles make sure that the brace poles naturally point straight down.

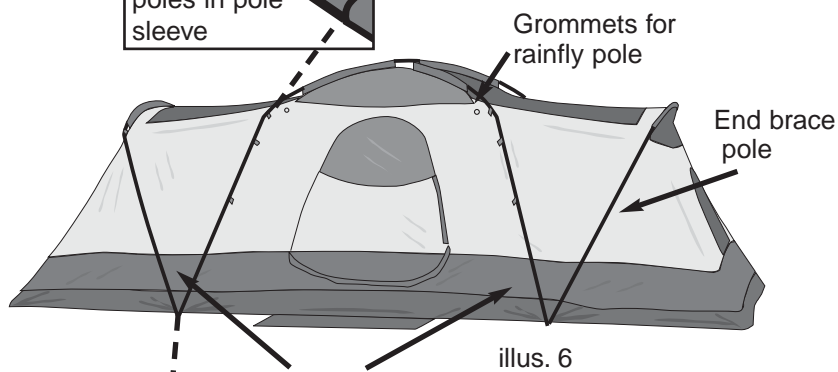

illus. 6 Shown with center brace poles and end brace poles in position.

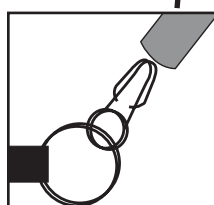


illus. 7


# 4 Attach Rainfly

- Assemble rainfly poles, by interlocking shock-corded poles.
- Insert rainfly pole through the pole sleeves located at the center edges of the underside of rainfly. (illus. 8)
- Drape rainfly over tent frame, pole side down. rainfly poles go over door and rear window and attach "S" hooks on rainfly into holes in brace poles. (illus. 11)
- Secure rainfly with hook & loop fasteners located on underside of fly. (illus. 9)
- Insert tip of rainfly pole into the grommet on the front of the tent and gently arch the pole until you can insert the opposite end in the other grommet.. Repeat for back side of tent. (illus. 6 & 9)
- Stake out rainfly ends using included guylines. (illus. 10)

illus. 8 Rainfly poles through pole sleeves

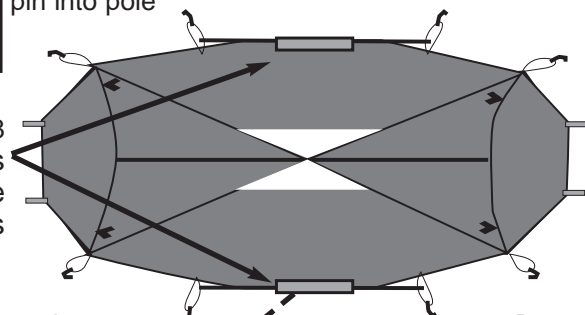

illus. 9 Tent shown completely set-up.

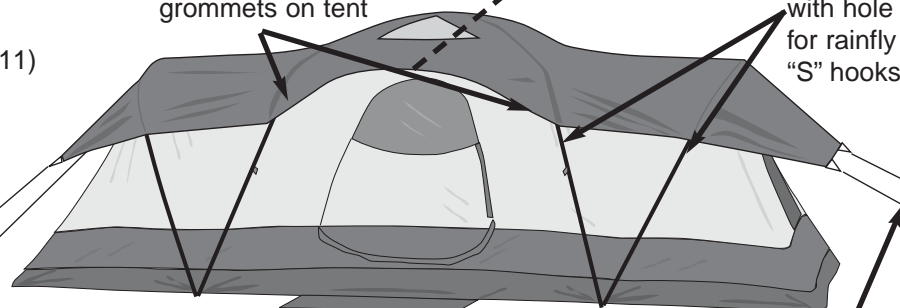

illus. 10 Stake out rainfly ends. Slide the disc up the rope to tighten guyline.



## Things You Should Know

• Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.

• Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.

• STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.

• TENT POLES SHOULD NOT BE LEFT TELESOPED TOGETHER DURING STORAGE.

• Seam sealer has not been provided with your tent. We recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

• Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

**WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.  
3600 N. Hydraulic • Wichita, Kansas 67219  
1-800-835-3278 • www.coleman.com

MADE IN SRI LANKA